



Established 1906

WT KNOWLES & SONS LIMITED

Fitting Instructions

Gas Terminal Square Base - Flanged

Code No: KNO160SQF

W T Knowles & Sons Limited

Ash Grove Pipe Works


Elland

West Yorkshire

HX5 9JA

www.wtknowles.co.uk

July 2018: Issue 2

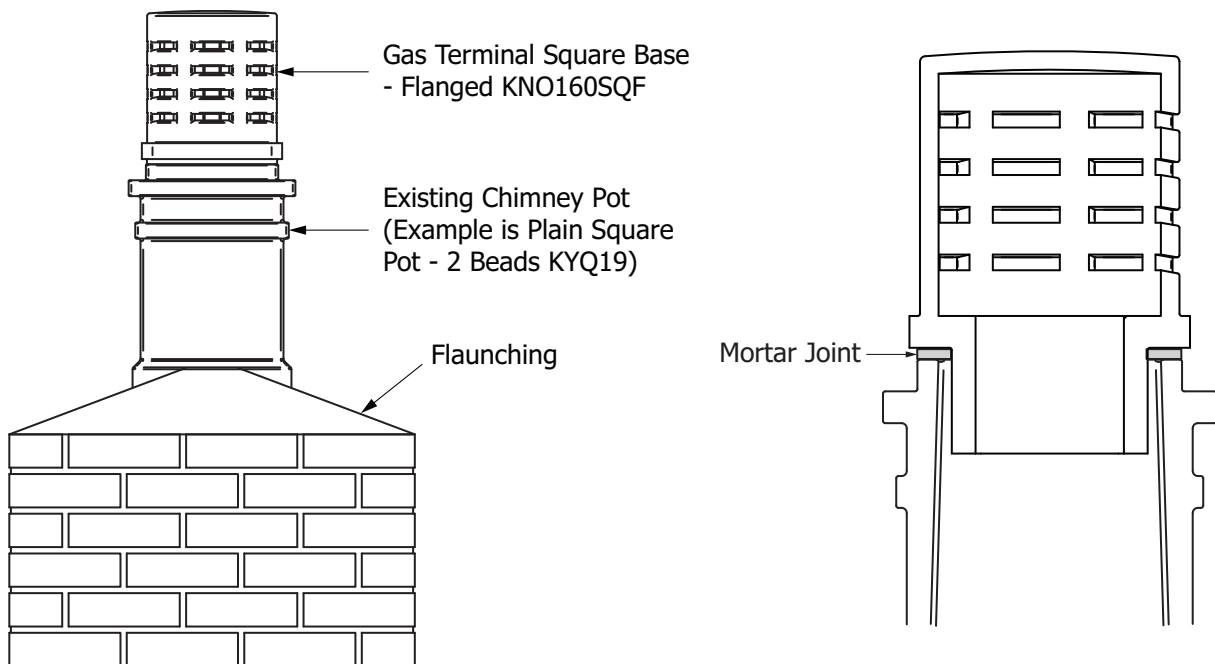

Instructions

- Inspect existing chimney for cracks and ensure the inside of the chimney pot is clear and free from debris.
- Check that the cement flaunching is sound and the pot is fully secure.
- Clean the inside of the top of the pot and the joint face of the pot.
- Inspect the terminal. Confirm it is undamaged and ensure all surfaces are clean and free of debris.
- Mix the mortar with brick coloured dye and apply a bead of mortar to the top face of the pot.
- Carefully insert the spigot of the terminal into the pot and lightly press down onto the mortar joint.
- Align the terminal vertical and square with the chimney pot and trim off excess mortar. Ensure the mortar is smooth and tapered out, to allow rain to run down the outside of the chimney pot.

