



Established 1906

WT KNOWLES & SONS LIMITED

Fitting Instructions

Gas Terminal Leeds Bishop with Spigot

Code No: KNOLBGT1

W T Knowles & Sons Limited

Ash Grove Pipe Works


Elland

West Yorkshire

HX5 9JA

www.wtknowles.co.uk

July 2018: Issue 2

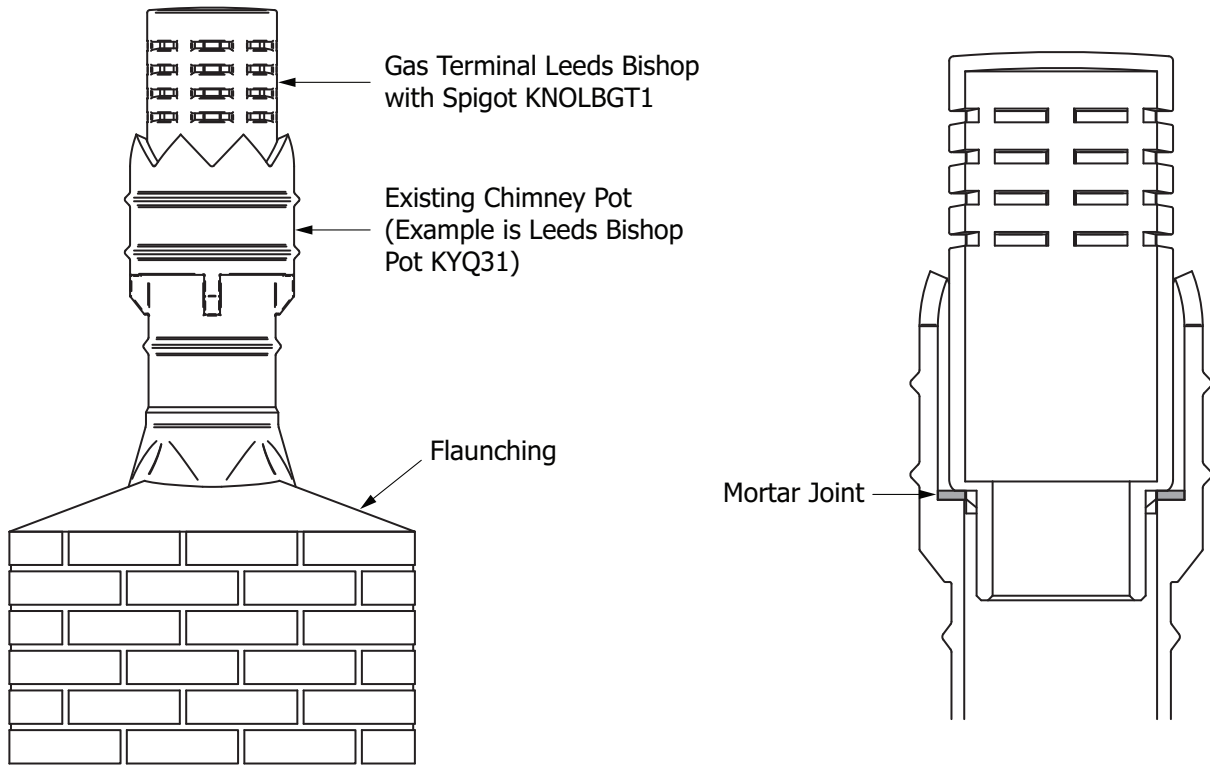

Instructions

- Inspect existing chimney for cracks and ensure the inside of the chimney pot is clear and free from debris.
- Check that the cement flaunching is sound and the pot is fully secure
- Clean inside of the top of the pot, the joint face and the ribs inside the pot.
- Inspect the terminal. Confirm it is undamaged and ensure all surfaces are clean and free of debris, especially the locating grooves.
- Try the terminal in the pot to ensure that it locates correctly on the ribs and then remove.
- Mix the mortar and apply a bead to the top of the internal ribs and the internal top face of the pot.
- Carefully insert the terminal into the pot, locate onto the ribs and lightly press down onto the mortar joint.
- Align the gas terminal vertically.

